ITEM	MAINTENANCE INTERVAL (whichever comes first)		REMARKS		
	Hours	Calendar			
Clean engine surroundings and components from debris		Pre-Ride	Clean. Do not pressure wash		
Cab safety nets		Pre-Ride	Check for tightness, damage and operation		
Seat belts		Pre-Ride	Check for damage and operation		
Shift linkage		Pre-Ride	Make sure Park will fully engaged. Adjust if necessary		
Coolant hoses		Pre-Ride			
Coolant level		Pre-Ride			
Brake fluid level		Pre-Ride			
Brake system/Throttle pedal travel		Pre-Ride			
Fuel and oil level		Pre-Ride			
Steering		Pre-Ride	Inspect. Made adjustments or replace as needed		
Front suspension		Pre-Ride			
Rear suspension		Pre-Ride			
Tires		Pre-Ride			
Wheels/fasteners		Pre-Ride			
Frame and fasteners		Pre-Ride			
Headlamp & tail lights		Pre-Ride			
Axle and steering joint boots		Pre-Ride			
Change engine oil (initial break-in only)	5 hr	-	Change engine oil		
Check Air filter	10 hr	Monthly	Clean or replace if necessary		
Check 800 valve clearance	25 hr	3 Months	Check clearance. Adjust if necessary		
Brake pad wear	25 hr	3 Months	Inspect periodically		
Service or replace air filter	25 hr	3 Months	Inspect and clean. Replace as needed		
Change engine oil and filter (initial break-in only)	25 hr	-	Change engine oil and filter		

Change engine oil and filter					
(2 nd change only)	25 hr	-	Change engine oil and filter		
Battery	25 hr	3 Months	Check terminals and water level		
Transmission/gearbox oil	25 hr	3 Months	Inspect level, change yearly		
Rear differential oil	25 hr	3 Months	Inspect, lubricate, change yearly		
	05.1				
Front differential oil	25 hr	3 Months	Inspect level, change yearly		
Change engine oil and filter (reoccurring change)	50 hr	6 Months	Inspect level often, change every 6 months		
Change engine oil (reoccurring change)	100 hr	12 Months	Inspect level often, change yearly		
0 1	400.1	10.11			
Check engine oil cooler fins	100 hr	12 Months	Clean as needed		
Lubricate driveshaft u-joints	100 hr	12 Months	Lubricate Zerk fittings		
Shift linkage	100 hr	12 Months	Inspect, lubricate, adjust		
Steering	150 hr	12 Months	Inspect, lubricate		
Throttle cable	150 hr	12 Months	Inspect, adjust, lubricate, replace if needed		
CVT belt	150 hr	12 Months	Inspect. Replace if needed		
Check 800 valve clearance	150 hr	12 Months	Check clearance. Adjust if necessary		
Fuel system	250 hr	24 Months	Check for leaks. Change fuel filter		
Replace engine coolant	250 hr	24 Months	Drain and replace		
Engine mounts	250 hr	24 Months	Inspect		
Wiring	250 hr	24 Months	Inspect for wear. Apply dielectric grease to connectors subject to water, mud, etc.		
Spark plugs	250 hr	24 Months	Replace as needed		
Ignition timing	250 hr	24 Months	Adjust as needed		
Exhaust system	250 hr	24 Months	Check for leaks and operation		
Brake fluid	350 hr	36 Months	Drain and change fluid		
CVT Clutch	350 hr	36 Months	Inspect, clean, replace worn parts		
Wheel bearings	350 hr	36 Months	Inspect, replace as needed		
Toe adjustment	350 hr	36 Months	Inspect, adjust as needed		

PERIODICAL MAINTENANCE SCHEDULE

INTERVAL	MONTHS	1	3	6	12		
ITEM	MILES	INITIAL 120	EVERY 600	EVERY 1200	EVERY 2400		
Muffler & Exhaust Pipe Bolt, Nuts		Т	Т	Т	Т		
Valve Clearance		Í		E	1		
Air Cleaner		-	С	С	R		
Air Cleaner Vent Tube			1	T.	1		
Engine Idle RPM		1	1	I,	I		
Carada Blass		-	(-)	T.	1		
Spark Plug		Replace Every 4000 MILES)					
Engine Oil		R	(= :	R	R		
Oil Filter		R	-	R	R		
C.V.T Belt		(Inspection Every 600 Miles (replaced if necessary)					
Fuel Tube		-	1	T.			
		Replace Every 4 Years					
Throttle Cable Play		1	1	(1)	I		
Bolts and Nuts		Т	Т	Т	T		
General Lubrications		-	L	L	L		
Muffler Plumbage	0	Visual Inspection Every 1200 Miles (replaced or tighten if necessary)					
Code: C ~ Cle	aning (replace	d if necessary)	I ~ Inspection	, cleaning, and	l adjustment		
L ~ Lub	rication		R ~ Replace	ment	T ~ Tighten		