

Contents:





STEP 1	Attach the Light Bar Brackets to the Assembly Bracket.
STEP 2	 Slide the 10" Light Bar on to the assembly by inserting the brackets into the appropriate groove.
STEP 3	Lay the harness back over the light and in front of the brackets.




<section-header></section-header>	Locate the cut-outs to be used for installation.
STEP 5	 Using the provided Assembly Bracket Bolts, attach the assembly to the inside of the frame.
<image/>	Remove the floor panel and raise the seat.



<section-header></section-header>	 Plug the appropriate end of the Wire Harness to the matching end of the light bar harness. Route the harness to the area under the seat. Secure the harness using zip-ties (not provided) so that it does not contact any moving parts from the deck. Note: Routing the Wire Harness is left to the discretion of the installer, this route is only an example.
<section-header></section-header>	 Under the seat, locate the two prong plug provided on the mower's wire harness. Remove the cover plug and attach the corresponding end of the wire harness coming from the light (see the next illustration).
<section-header></section-header>	 Coil up the excess and secure remaining wire to the seat frame. Double check the wire harness route to ensure it does not contact any moving parts on the mower.



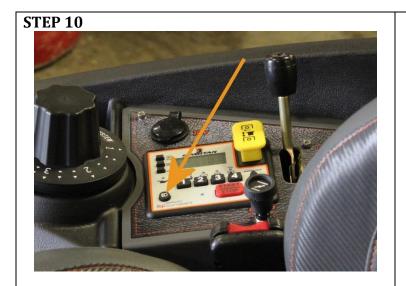

- Locate the light button on the control panel.
- Check to see if the light is operational.
- Replace the floorboard and the seat.