


INSTALLATION INSTRUCTIONS: Manual Mulching Chute

It is recommended that bolts remain "hand tight" until all bolts <u>are</u> installed.

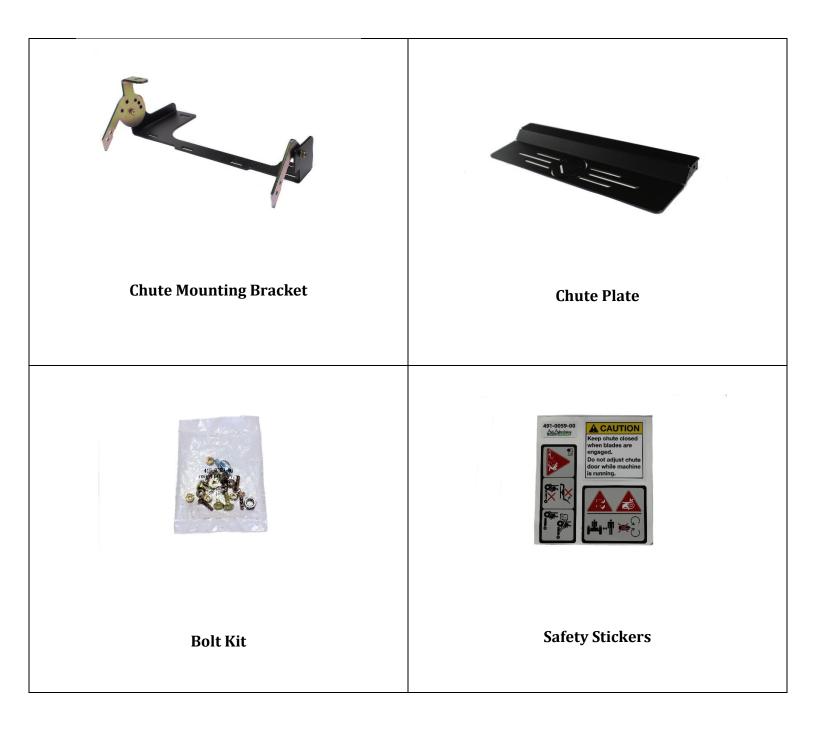



INSTALLATION INSTRUCTIONS: Manual Mulching Chute

STEP 1	 Bolt the Chute Plate to the Chute Mounting Bracket using the provided ¼" carriage bolts. Align the holes of the plate to the corresponding holes of the bracket and insert bolts. Secure with the provided nuts.
STEP 2	 Locate the Spring Pin and matching nut from the provided bolt kit. Screw the nut onto the spring pin.
STEP 3	 Insert the spring pin and nut into the corresponding hole of the chute mounting bracket as shown here. Align one of the holes of the mounting bracket with the corresponding spring pin hole and screw it in enough that the plunger of the spring pin is inserted into the aligned hole. Over tightening of the spring pin could cause it to snap. NOTE: There may be some powder coat in the threads of the bracket. It could be helpful to either pre-tap the hole or use a small impact wrench to screw the spring pin in.



INSTALLATION INSTRUCTIONS: Manual Mulching Chute

STEP 4	• Remove the entire chute assembly.
<section-header></section-header>	 Install the chute assembly to the mower deck by aligning the pre-cut holes in the deck with the corresponding holes of the assembly. Secure the assembly using the provided 5/16" carriage bolts and nuts.
<section-header></section-header>	 Install the safety stickers. Check the operation of the assembly using the adjustment handle and the spring pin.