



INSTALLATION INSTRUCTIONS: *Spartan* Quick Shield Assembly 493-0055-00

61" & 72" Deck



48" & 54" Deck




61" & 72" Deck Installation

STEP 1



- Attach handle to the inside of the bracket on the edge nearest the back of the mower.
- Insert bolts from the outside of the bracket and tighten with a 1/2" wrench or socket.

STEP 2

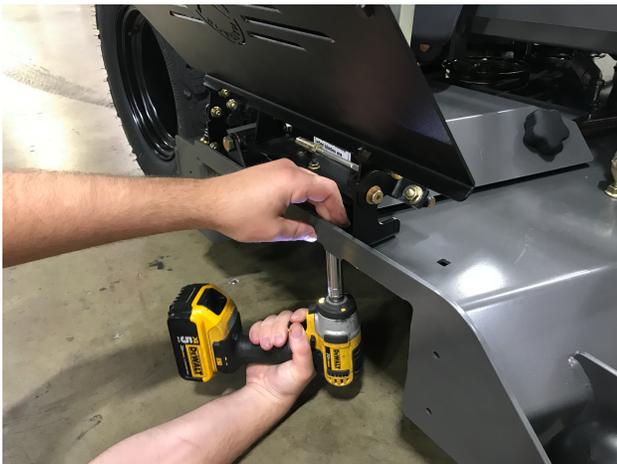

- Remove your existing chute and install in the existing holes with the new, included nuts and bolts.



**INSTALLATION INSTRUCTIONS: Spartan
Quick Shield Assembly 493-0055-00**

STEP 3



- Place handle grip onto lever arm. Insert and tighten both included bolts.


48" & 54" Deck Installation

STEP 1



- Attach handle to the outside of the bracket on the edge nearest the front of the mower.
- Insert bolts from the inside of the bracket and tighten with a 1/2" wrench or socket.

STEP 2

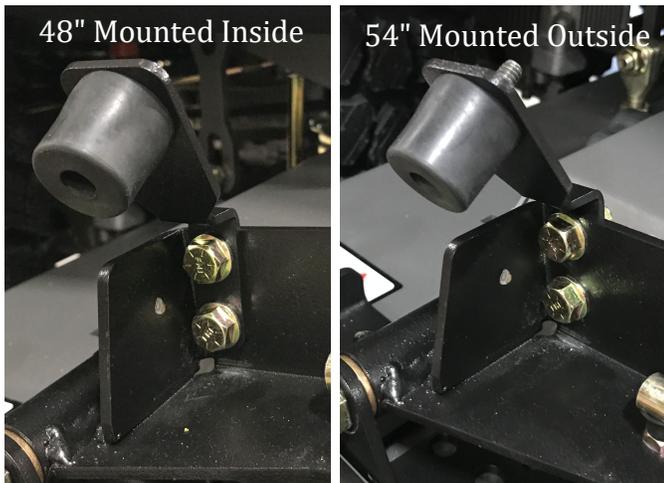

- 48" Deck - Attach bracket to the **INSIDE** of the bracket on the edge nearest the back of the mower.
- 54" Deck - Attach bracket to the **OUTSIDE** of the bracket on the edge nearest the back of the mower.



**INSTALLATION INSTRUCTIONS: *Spartan*
Quick Shield Assembly 493-0055-00**

STEP 3



- Remove your existing chute and install in the existing holes with the new, included nuts and bolts.

STEP 4



- Place handle grip onto lever arm. Insert and tighten both included bolts.