



INSTALLATION INSTRUCTIONS: Front Side-Mount Hitch Kit 493-0040-KT




Two Part Receiver Clamp




Bolt Kit

STEP 1

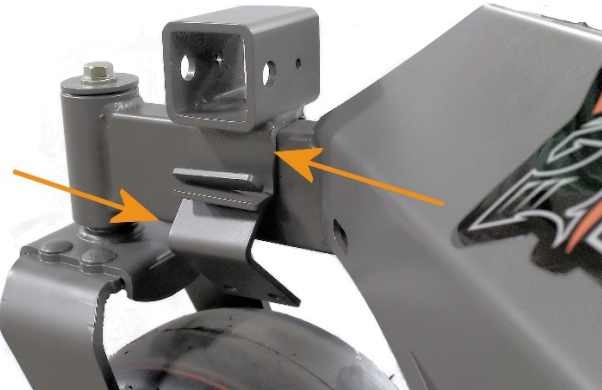

- Set in place the Two Part Receiver Clamp as shown.

STEP 2

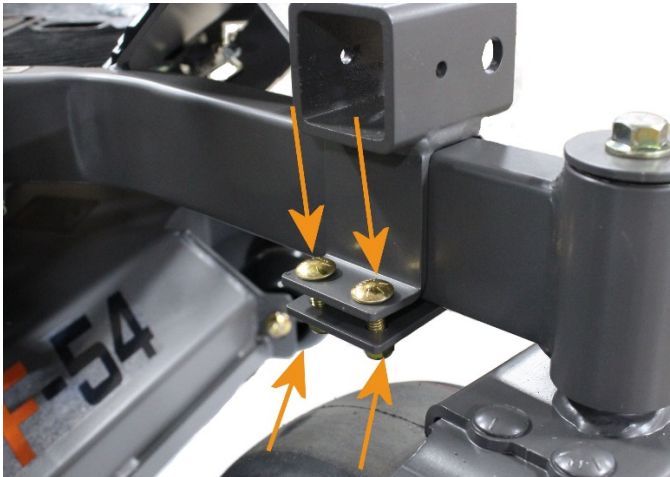

- Secure the upper and lower parts of the Receiver Clamp using the provided Carriage bolts and nuts.
- Slide to the desired location and tighten the bolts.