



RZ SEAT SHOCK

I N S T R U C T I O N S

For more instructions visit [SpartanMowers.com](https://www.SpartanMowers.com) or contact your local dealer.

RZ SEAT SHOCK - KIT PARTS

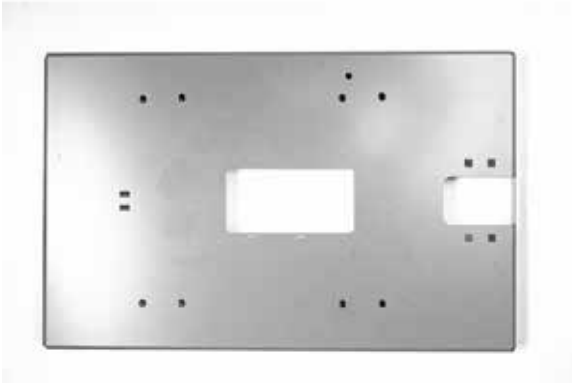


Figure 1
Seat Plate



Figure 2
Mower Bracket, Shock, Mounting Brackets, & Attachment Parts

STEP 1

Install 3/8" bolt through shock mounting brackets, plastic washers, and shock as shown. Secure using 3/8" nut and tighten securely.



STEP 2

Attach assembled shock to seat plate using (4) 3/8" carriage bolts and serrated nuts. Tighten securely.



STEP 3


Flip seat plate over as shown. Install pin to bottom of seat shock and secure using two bow tie clips as pictured.



STEP 4

Install 5/16" bolt and serrated nut as shown.

This bolt will act as a seat stop to prevent damage to the seat & shock assembly.

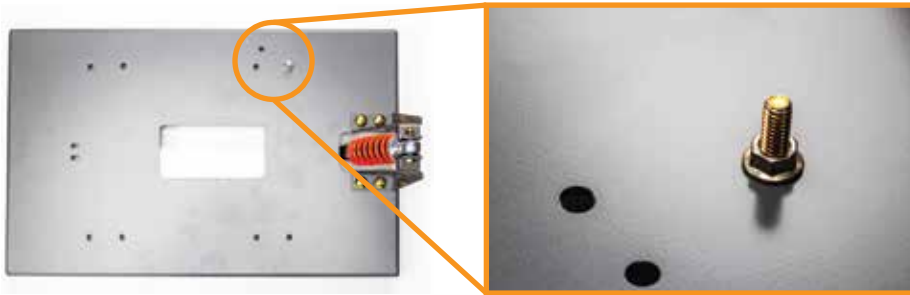

STEP 5

If "Caution" decal is installed on middle of crossmember as shown, peel sticker and move to left side of crossmember.



STEP 6

Install remaining bracket to center of crossmember.

Secure using two 5/16" flange bolts and serrated nuts.

Note: Some older models may not have predrilled holes in crossmember for this bracket.

If holes are not present use bracket as a guide and drill using a 5/16" bit.

Make sure to not damage wiring or any other component while performing this step.



STEP 7

Reinstall seat plate to mower. Route seat safety switch wire as shown and secure using zip ties (not included).



