

Installation Instruction: Blinker Assembly

Materials and Hardware:



Blinker Pod -  
mounting hardware included



Horn -  
mounting hardware included



Passenger Side Blinker Light



Driver Side Blinker Light



3/8" x 1" Carriage Bolt  
with Flanged Nylock Nut



zip-Ties

## Installation Instruction: Blinker Assembly

**STEP 1**

1. Adjust the tilt to its lowest position. This is to make room for the wire harness.

**STEP 2**

1. Locate the flasher attached to the wire harness of the Pod.
2. Remove the flasher from its plug.

Note: The reason for removing the flasher is to allow the wire harness to be fed through the opening in the steering column illustrated in the next step.

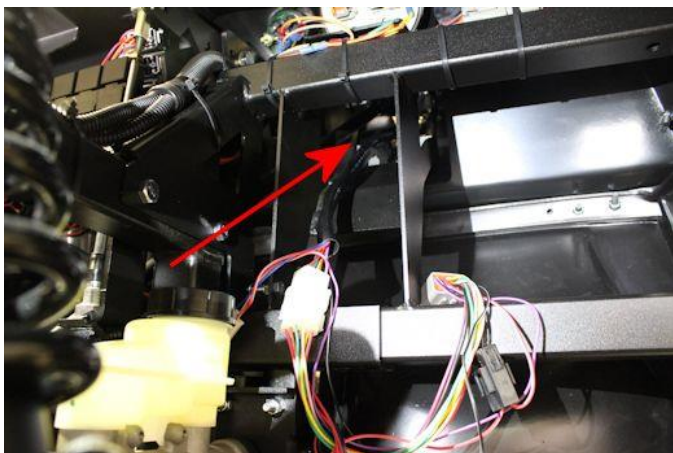
**STEP 3**

1. Feed the wire harness through the opening shown here.

Note: This step may require some assistance to direct the wire harness through the steering column from under the hood. Some of the plugs are a tight fit but, be assured, they will fit through the space shown here.

Installation Instruction: Blinker Assembly

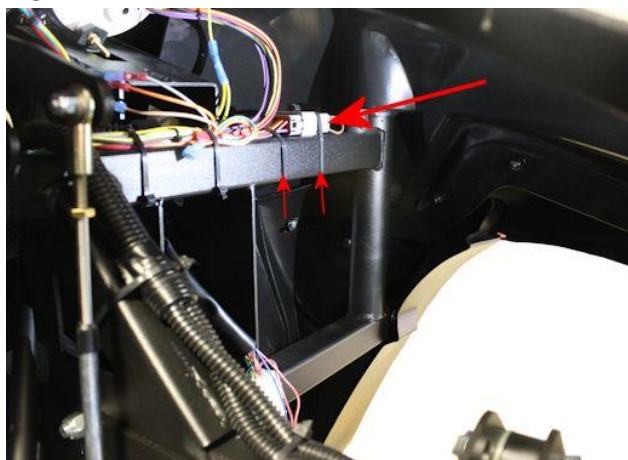
**STEP 4**



1. Take care to direct the wire harness through the dash panel frame as shown here.
2. When you are satisfied with the route of your wire harness, **plug the flasher back up to its receptacle.**

Note: This view is shown from the driver, under the fender well looking up at the dash.

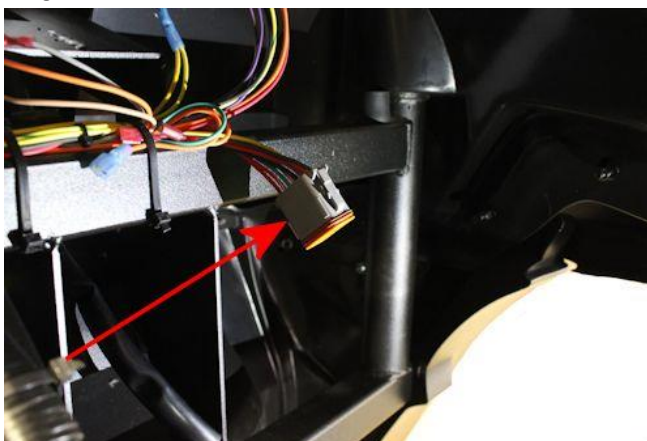
**STEP 5**



1. Locate the plug.
2. Cut the two zip ties indicated by the smaller arrows.

Note: This view is looking in from the hood access, toward the driver side of the machine.

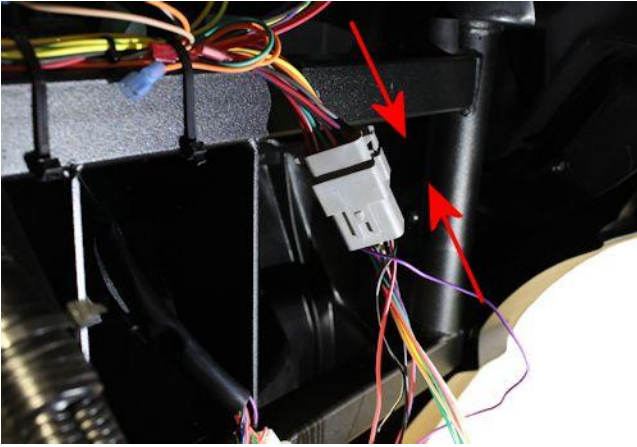
**STEP 6**



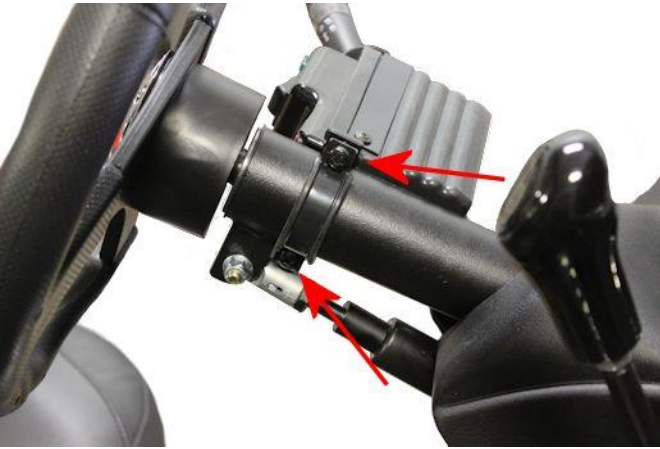
1. Remove looped plug to expose the receptacle.



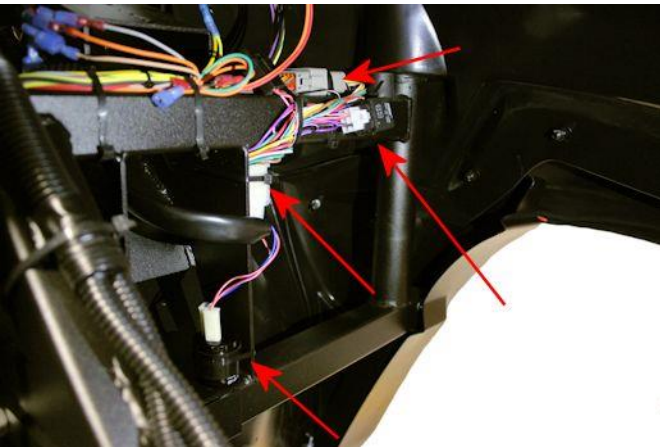
## Installation Instruction: Blinker Assembly

**STEP 7**

1. Insert the matching plug from the Blinker Pod to the existing wire harness plug.
2. Make sure the plug is inserted all the way.

**STEP 8**

1. With a Phillips Head screwdriver, attach the pod to the steering column using the provided hardware.
2. Get both screws started then adjust the pod for the desired position.

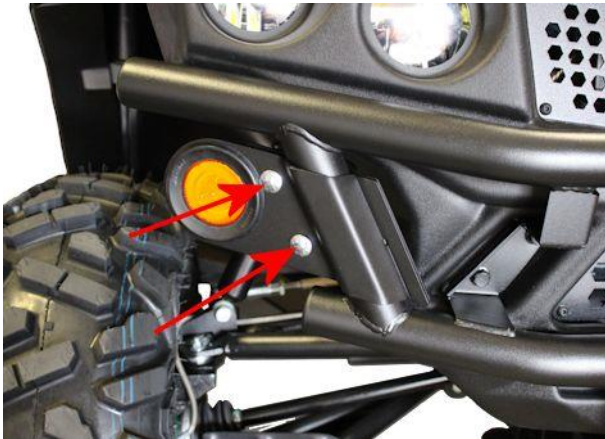
**STEP 9**

1. With zip-ties, secure the components of the wire harness back to the frame as shown here.
2. Place the zip-ties in the location indicated or where it best suits you.

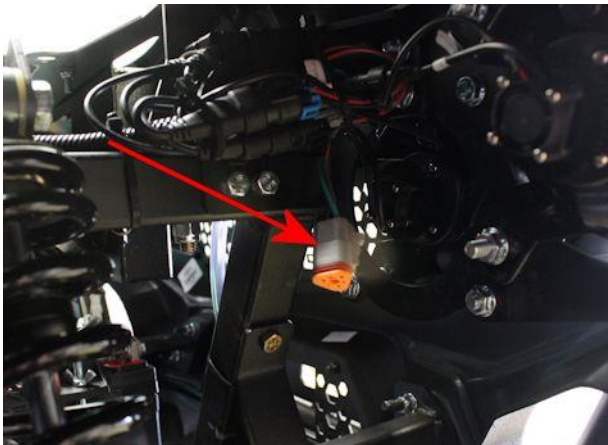
## Installation Instruction: Blinker Assembly

**STEP 10**

1. Set the two piece bracket in place attaching to the outside, vertical tube of the brush guard as shown here.

**STEP 11**

1. Align the bracket with the top tube and secure it with the provided 3/8 x 1" Carriage Bolt and Flanged Nylock Nut.

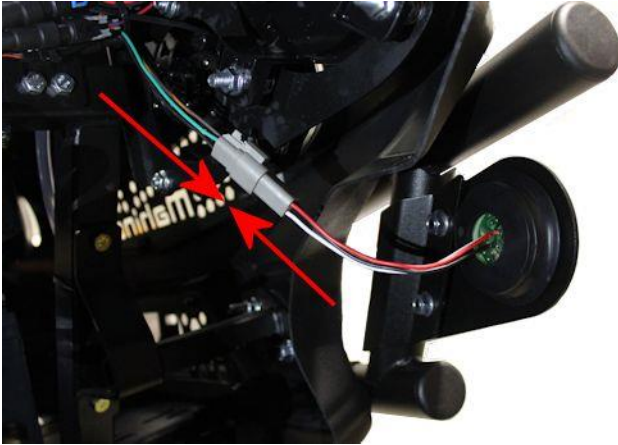
**STEP 12**

1. Locate the existing blinker plug located just behind the headlight.
2. Pull the plug free from the cluster (it may or may not be necessary to cut the zip-ties holding the wire cluster).

Note: This view is from the passenger side of the machine.

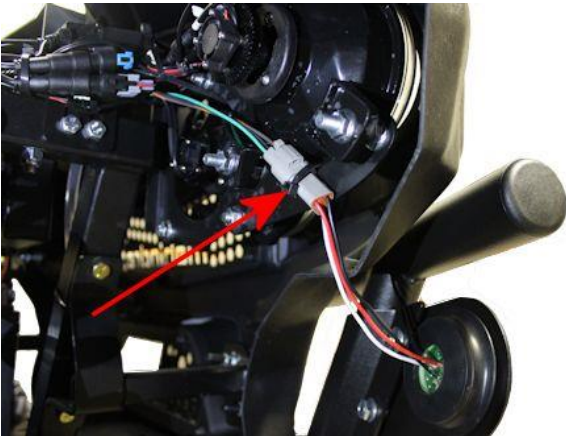
Installation Instruction: Blinker Assembly

**STEP 13**



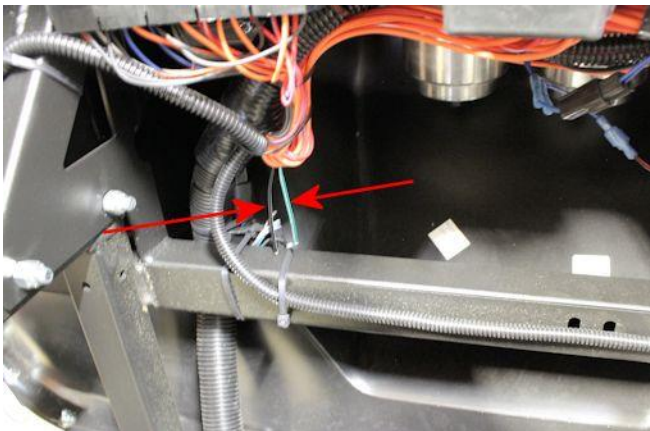
1. Connect the blinker plug to the blinker light as shown here.

**STEP 14**



1. Secure the plug to the headlight frame as shown here.
2. Another option would be to drill a hole in the underside of the plastic to route the plug through.

**STEP 15**

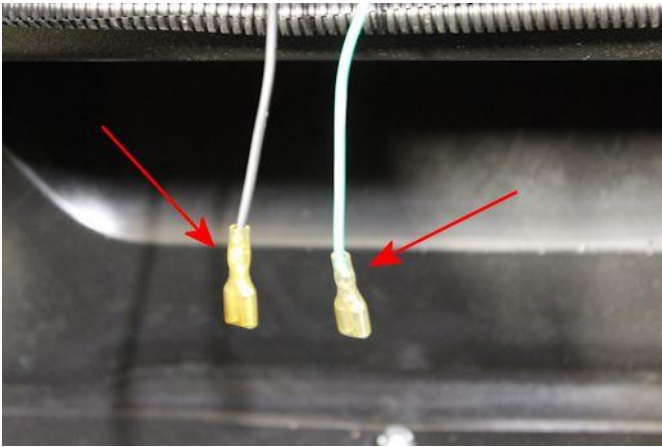


1. To connect the horn, first locate the two wires designated for the horn, located in the machines wire harness. There is a black wire and a green (with white stripe) wire. They should have a small zip-tie holding them together. Pull these free from the bundle.

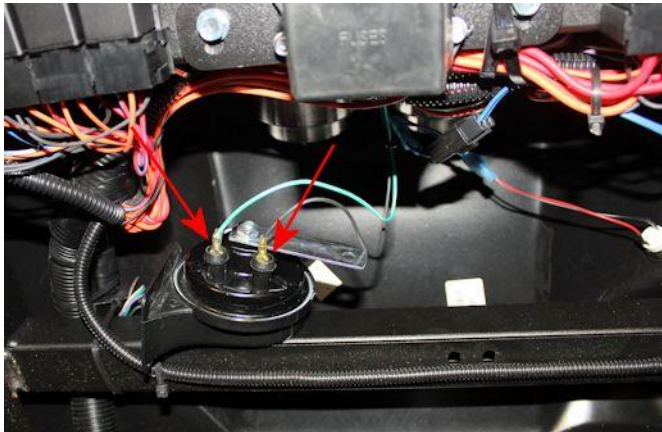
Note: This view is looking in from the hood to the passenger side of the machine. The wires may be difficult to find, but be assured they are there.



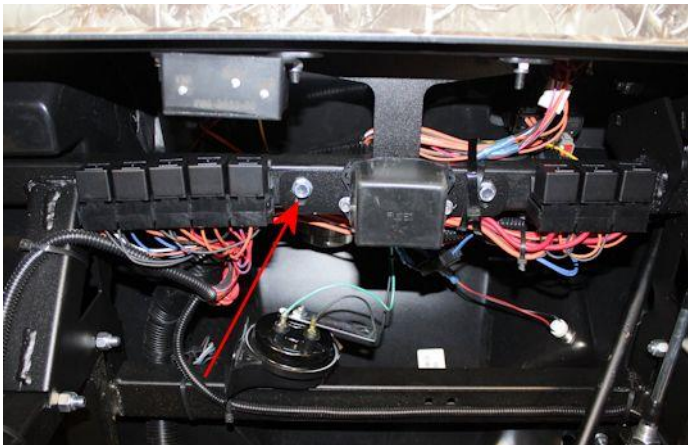
## Installation Instruction: Blinker Assembly

**STEP 16**

1. Located inside the horn package, there are two connector ends.
2. Attach the connectors to the two wires located in the previous step as shown here.

**STEP 17**

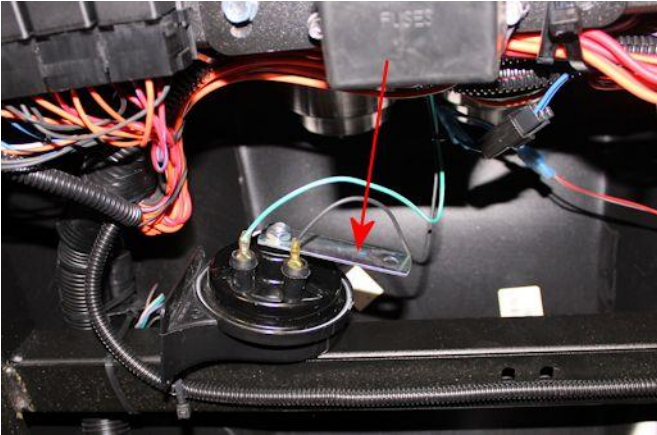
1. Connect the two wires to the horn itself as shown here.

**STEP 18**

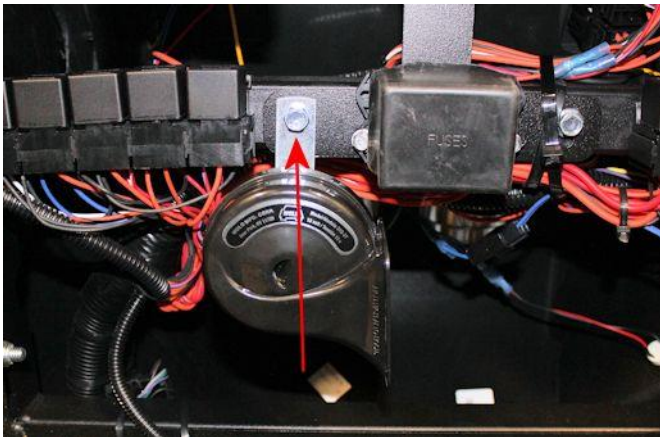
1. With a ½" socket, remove the self-threading bolt, indicated here.
2. Retain the bolt, it will be used to mount the horn.

Reminder: This view is still looking in from the hood access, toward the dash panel.

## Installation Instruction: Blinker Assembly

**STEP 19**

1. Attach the mounting bracket to the horn (the bracket and nut are provided in the pre-packaged horn kit).

**STEP 20**

1. Mount the horn using the same bolt removed in STEP 18.
2. Adjust to desired position and tighten the bolt.

**STEP 21**

1. Double check all connections and tighten all remaining loose bolts.
2. Turn the key on and check to see that all blinkers and the horn are working properly.