



2018 Intimidator Sheet Metal Bumper 793-1105-00

Safety:

- Ensure that the UTV is safely parked on level ground with the ignition off.
- Wear all appropriate PPE for the following procedures.

Note:

- Leave all hardware loose until the entire assembly is in its final position.

Assembly Components:

Ensure that you have all of these components before beginning the installation

Note: Bull bar, 793-1050-20 sold separately



Step 1

Locate and remove bolts from stock bumper and any other accessories. Winch fairlead, etc.



2018 Intimidator Sheet Metal Bumper 793-1105-00

Step 2


Place left and right mounting brackets onto the existing bumper plates and insert bolts.



Step 3

Slide new bumper onto mounting brackets. It may be easiest to insert from the top and then down flush with brackets. Insert 2 bolts for each side.


Note: if optional bull bar is to be installed. Mount the bull bar onto bumper and tighten bolts before installing bumper onto the mounting brackets

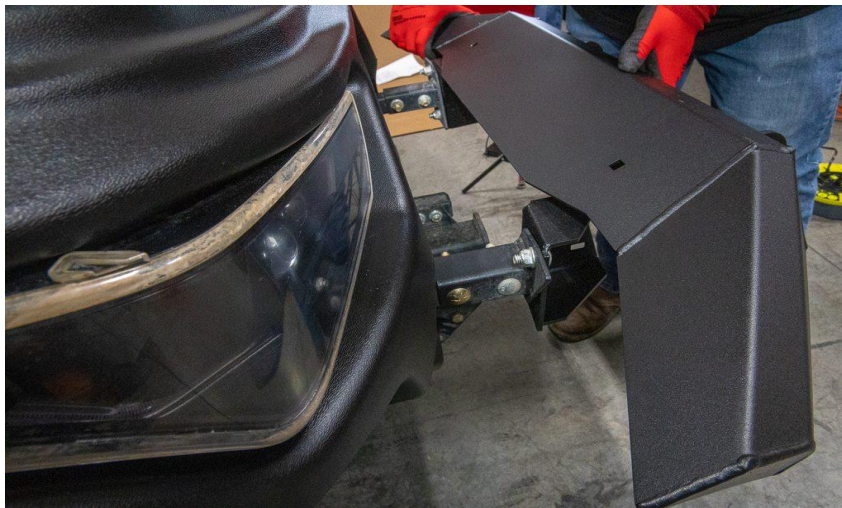

2018 Intimidator Sheet Metal Bumper 793-1105-00

Step 4

Install the skid plate. Insert 4 bolts on the bumper and two on the UTV frame.

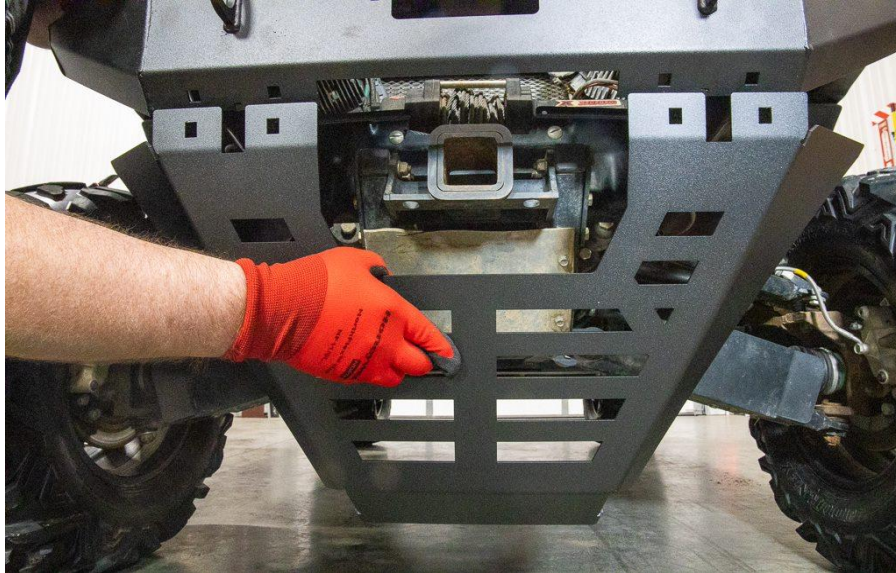

Step 5

Tighten all bolts and reinstall any other accessories. Winch fairlead, etc.



Enjoy! And thank you from Bad Dawg Accessories