



**LARGE GOURMET
GURU GRILL ASSEMBLY
INSTRUCTIONS**

Large Gourmet Guru Grill Assembly Instructions

1. Carefully unpack the grill components.
Caution: Be very careful not to drop ceramic components.
2. The carton should contain the following items:
 - a. 1 Grill lower section (Fig. 1)
 - b. 1 Grill upper section or lid (Fig. 2)
 - c. 1 Fire box (Fig. 3)
 - d. 1 Fire ring (Fig. 4)
 - e. 1 Fire grate (Fig. 5)
 - f. 1 Cooking grate (Fig. 6)
 - g. 2 Upper and lower bands, identical (Preinstalled on grill)
 - h. 1 Hinge assembly (Fig 7)
 - i. 1 Draft door (Preinstalled on Lower Section)
 - j. 1 Vent cap with handle (Fig 8)
 - k. 1 Vent Cover (Fig 9)
 - l. 1 Thermometer with retainer clip (Fig 10)
 - m. 1 Grill lid handle assembly (Fig. 11)
3. The following components are optional and not included in the carton:
 - a. Optional fire grate divider (Fig. 12)
 - b. Optional plate setter (Fig. 13)
 - c. Ceramic grill feet (Fig. 14 for use with grill table and cabinet)
4. The grill can be mounted in a roll around cart, table or cabinet system offered by Gourmet Guru Grill.
5. **SAFETY NOTICE:** The grill lower section and lid are heavy so getting help when handling these two sections during assembly is strongly advised.
6. Set the grill lower section (fig. 1) in the cart table or cabinet. In the case of the GGG cabinet or table, the four ceramic mounting feet supplied with them should be set equal distance around the grill base perimeter and then set the lower grill section on the feet. Ceramic feet kits may also be purchased separately.

7. Align the lower section with the cabinet, table or cart as shown in the pictures below. The yellow indexing dot on the lower section can be used to


center the grill.



8. Set the upper grill section on top of the lower grill section and align so that yellow indexing dot on the lid and lower section are aligned and the green hinge indexing dots on the rear of both sections are aligned.




9. Loosen the tensioning bolts on the upper and lower section bands.

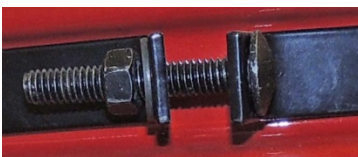

10. Remove the 8 acorn nuts from the both bands at the back of of the grill and install the hinge with open side of the hinge facing down (see picture below) on the lower band first and then the upper band. Only tighten the acorn nuts enough to hold the hinge on the band at this time. You may need to loosen the bolts holding the upper lower sections of the hinge together to make it easier to install the hinge. Tighten all 8 nuts on


the hinge.

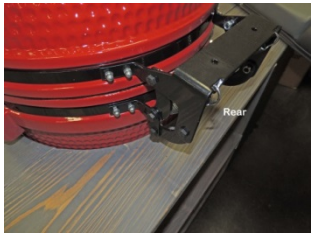

11. Check alignment of the upper and lower grill sections and rotate the upper section to align if need be. Tighten band tension bolts.
12. Remove the acorn nuts from the front of the upper band and install the handle assembly with logo on handle oriented correctly.




13. Raise and lower the lid to make sure that the lid operates freely and that the lid sits firmly on the lower section all the way around the perimeter of the grill. If there is a gap, close the lid. Loosen the band bolts slightly and retightened.
14. Open the lid, remove the retainer clip from the thermometer and insert the thermommeter through the opening towards the top front of the lid. Resinstall the retainer clip, open side down, as shown below.

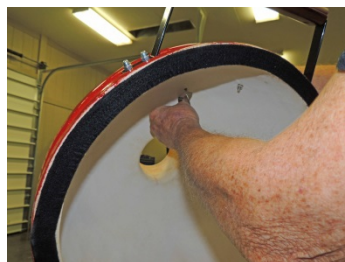

15. Open the lid and install the firebox in the lower grill section orientating the ash removal opening in the firebox to match up with the draft door at the

bottom of the lower section.

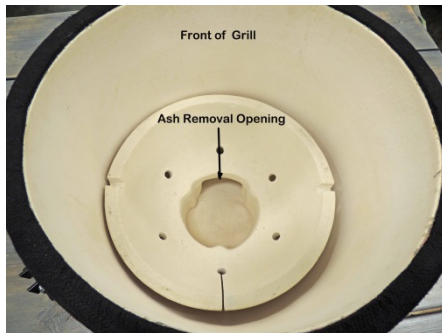

16. Install fire grate in the bottom of the firebox as shown below with the beveled side of the grate facing down. If you purchased the fire grate divider with your grill and want to use it now you can install as shown below. The divider allows you to use less charcoal for cooking smaller portions or create cooking and warming sections on the cooking grate.




17. Install the fire ring on top of the firebox as shown below.



18. Install the cooking grate on top of the fire ring as shown below. The hinged section allows you to add more charcoal while cooking if necessary, suggest that it be positioned at the front of the grill.



19. Close the lid and install the metal top vent if you are going to use the grill now. The purpose of the ceramic vent cap is to prevent rain from entering the grill when not in use.
20. If you purchased the optional plate setter, it has multiple uses. It can be installed with the legs down for baking operation such as pizza with an optional pizza stone or with legs up with cooking grate on top of legs for indirect cooking or smoking as shown below.

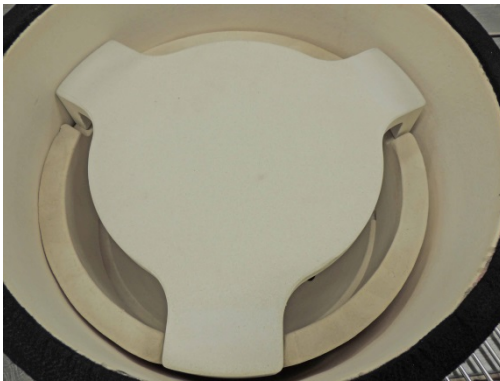

Baking



Indirect Heating/Smoking

21. You're now ready to enjoy cooking on your Gourmet Guru Grill!

Warranty Information: Go to www.gourmetgurugrill.com for warranty information and to register your Goument Guru Grill.



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7



Fig. 8



Fig. 9



Fig. 10



Fig. 11



Fig. 12

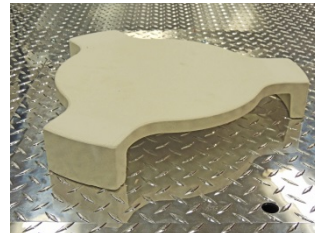


Fig. 13



Fig 14